

INSTRUCTIONS

SAVE THESE INSTRUCTIONS

Cleaning: Before cleaning your lamp, turn off the switch or power source. Wipe the lamp with a soft, damp cloth.

IMPORTANT:

The battery inside this unit may not be fully charged. After electricity is connected to the unit, let the battery charge for at least 24 hours. Battery typically lasts for two to five years. Environmental factors impact battery life. Elevated ambient temperature, poor quality power and frequent short duration discharge will shorten battery life. Normal operation of this unit should then take effect. To check, press the push-to-test switch, the light inside should then turn on.

IMPORTANT SAFEGUARDS:

When using electrical equipment, close all electrical power before installation, at the OFF position.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

1. Dual head Emergency lighting is intend for indoor use only.
2. Do not operate this Emergency light in contact whit fluids or where there is excessive dust or humidity.
3. Equipment should be mounted in location and at height where it will be subject to tampering by unauthorized personnel.
4. Do not mount near gas or electric heaters.
5. Servicing of this equipment should be performed by qualified personnel.
6. Disconnect AC power before servicing.
7. Connect the emergency power cable directly to wall outlet. Do not use surge protector or extension cord

INSTALLATION (J-BOX MOUNTING) :

1. Feed fixture through back plate and connect AC power supply (figure A)
2. Connect wires through J-Box. Mount back plate on J-Box and secure with screws.
3. Connect battery only after continuous AC power can be provided to the unit (Figure B)
4. Align snaps and push housing directly onto main bottom case (Figure C). Apply continuous AC power and press "TEST" button to check light.


INSTALLATION (CONDUIT) :

1. Secure back plate to a wall. Route wires through hole in conduit flange and make conduit connection
2. Connect battery only after continuous AC power can be provide to the unit (Figure B)
3. Align snaps and push housing directly onto back plate (Figure C). Apply continuous AC power and press "TEST" button to check light.

OPERATION AND TESTING:

1. During an electrical power failure, the lamps will automatically come on for a minimum of 90 minutes.
2. To test, depress the TEST switch. The emergency lamps will illuminate. When the switch is released, the lamps will go off.

REGULAR

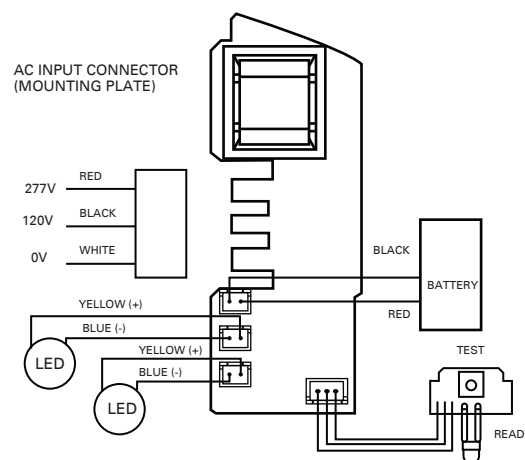

REMOTE CAPABLE

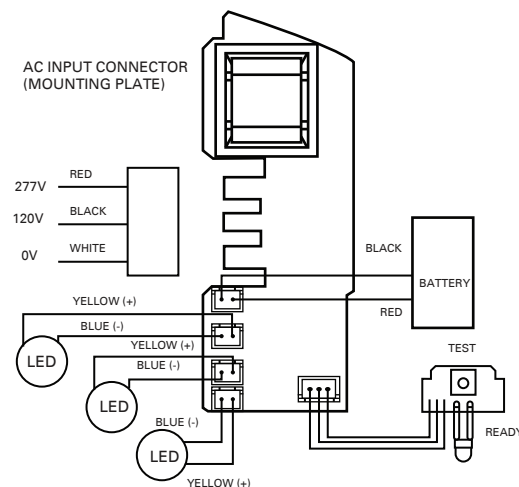


Fig. A (J-Box)



Fig. B

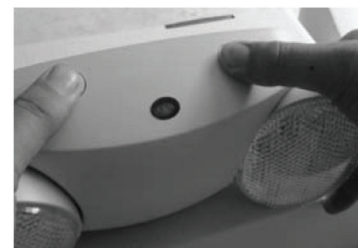


Fig. C

INSTRUCTIONS

CONSERVEZ CES INSTRUCTIONS

Nettoyage: Avant de nettoyer votre lampe, fermez ou coupez la source d'énergie. Essuyez la lampe avec une étoffe douce et humide.

IMPORTANT:

la batterie dans ce produit pourrait ne pas être complètement chargée. Lorsque vous connecter le produit à un courant, laissez la batterie charger pendant au moins 24 heures. La batterie a une durée de vie de deux à cinq ans. Des facteurs environnementaux pourraient affecter la vie de la batterie. Une température ambiante élevée, un courant électrique pauvre et une coupe de courant fréquente pourraient raccourcir la durée de vie de la batterie. Pour tester la batterie, pesez le bouton "push-to-test" et la lumière intérieure devrait s'allumer.

PRÉCAUTIONS IMPORTANTES :

Lors de l'utilisation des équipements électriques , fermer l'alimentation électrique avant l'installation à la position OFF.

LIRE ET SUIVRE TOUTES LES INSTRUCTIONS DE SÉCURITÉ :

1. L' éclairage double de secours de tête est pour un usage intérieur.
2. Ne pas utiliser cette lumière d'urgence dans des endroits mouillés, humides ou poussiéreux.
3. L'équipement doit être monté dans un emplacement et à une hauteur où il ne sera pas accessible par des personnes non autorisées.
4. Ne pas installer à proximité de gaz ou de radiateurs électriques .
5. L'entretien de cet équipement doit être effectuée par un personnel qualifié .
6. Coupez l'alimentation AC avant l'entretien.
7. Branchez le câble d'alimentation d'urgence directement à la prise murale Ne pas utiliser de rallonge.

INSTALLATION (MONTAGE J -BOX) :

1. Alimenter l'appareil à travers la plaque arrière et connecter l'alimentation au courant (figure A)
2. Connecter les fils à travers J -Box . Montez la plaque arrière sur le J -Box et fixer avec des vis .
3. Branchez la batterie seulement qu'après que le courant soit passé en continue à l'unité (Figure B)
4. Aligner les boutons et poussez le logement principal directement sur le fond du boîtier (Figure C). Laisser l'alimentation en continue et appuyez sur le bouton "TEST " pour vérifier la lumière .


INSTALLATION (CONDUIT) :

1. Fixez la plaque arrière au mur. Faites passer les câbles à travers le trou dans le conduit et procéder au raccordement.
2. Connectez la batterie seulement après une alimentation continue à l'unité. (Figure B)
3. Alignez les boutons et poussez directement sur la plaque arrière (Figure C) . Laisser l'alimentation en continue et appuyez sur le bouton "TEST " pour vérifier la lumière .

FONCTIONNEMENT ET TESTS :

1. Lors d'une panne de courant électrique , les lampes s'allumeront automatiquement pour un minimum de 90 minutes .
2. Pour tester, appuyer sur le bouton TEST . Les lampes d'urgence s'allument. Lorsque l'interrupteur est laissé, les lampes s'éteindront.

RÉGULIER

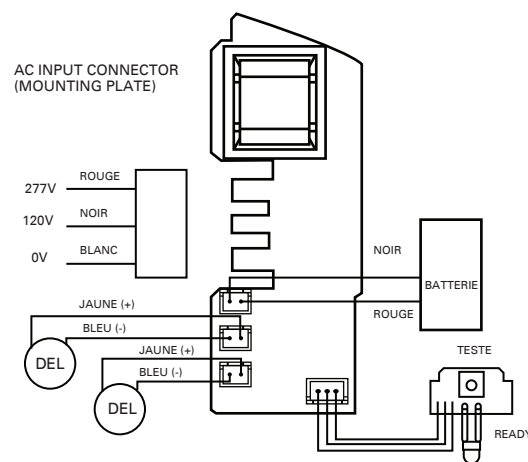

REMOTE CAPABLE

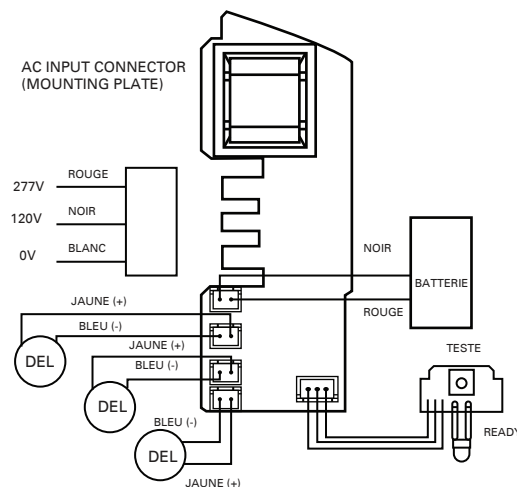


Fig. A (J-Box)



Fig. B

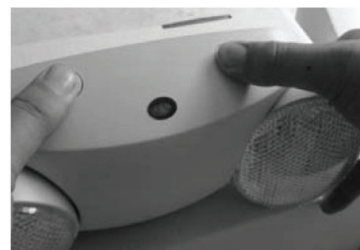


Fig. C